## tala

INSTALLATION GUIDE Basalt Single Pendant



IP20
Image: Centre of the state of the stat

#### BEFORE STARTING

We advise the fitting of our ceiling rose and pendant to be performed by a qualified electrician. Please read through these instructions before commencing work, and keep them for future reference. Please take extreme care when carrying out these instructions.

Important! This light fitting must be connected to the supply earth. If your lighting circuit does not have an earth, ask a qualified electrician to provide an earth facility. This light fitting is suitable for indoor use only. This fitting operates on 240V mains voltage. Please visit our website to see our reccomended dimmers

Warning! Always switch off electricity supply at the mains during installation and maintenance. We recommend that the fuse is withdrawn or the circuit breaker is switched off whilst work is in progress. Do not just turn off at the wall switch. All fittings must be installed in accordance with current Building Regulations and IEE Wiring Regulations.

#### **RECOMMENDED EQUIPMENT**


- Small flat head screwdriver - Wire strippers


- Insulation tape

Further equipment may be required for fixing to your ceiling.




#### **BASALT TRIPLE - PROVIDED COMPONENTS**

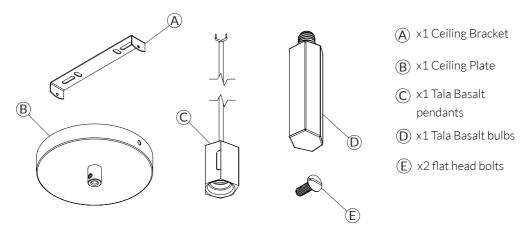

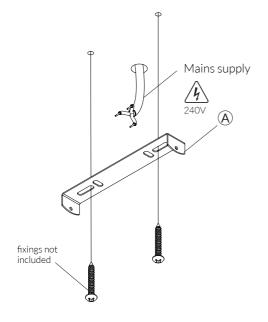

#### STEP 1

Attach (A) to the ceiling using screws and plug. Always choose screws and plugs that are appropriate for the ceiling.

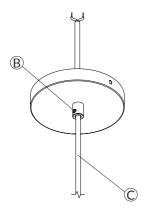


#### STEP 2

Adjust the cord (C) to your desired length. Using a flat head screw driver, tighten 'grub/set screw' (B) This will secure the cable in place. Maintain all double insulation


#### STEP 3

Cut off excess cable and strip wires to expose the copper core. Maintain all double insulation.

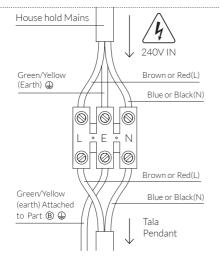

#### STEP 4

First identify your household wiring using current Building Regulations and IEE Wiring Regulations. Attach the pendant wiring to your household supply as shown. Use an appropriate junction box.

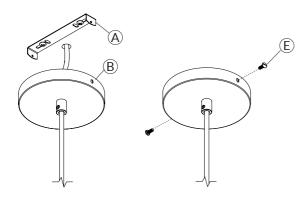


#### STEP 6

Fasten part  $(\widehat{A})$ to part  $(\widehat{B})$  using the bolts  $(\widehat{E})$  provided.

# 

#### STEP 6

Lift metal sleave (C) and screw in the bulb firmly. Take care not to let the metal sleeve fall onto the bulb

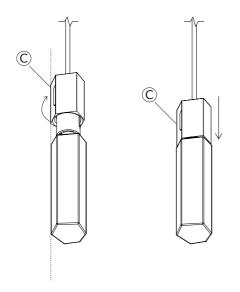

STEP 7 Rotate metal steeve ⑦ To align with the bulb

Carefully lower metal sleeve onto the bulb. you can now make and final tweeks to the alignment of the bulb and sleeve.

#### CARE AND CLEANING

We recommend cleaning with a soft dry cloth. Do not use abrasive materials as these will damage the finish of the product.

#### WARRANTY AND AFTER-CARE


This product has a three-year warranty. Within this time we will replace any parts that have functional defects. Please report any faults by emailing: customerservice@tala.co.uk

### CE

Pendant Layouts

DISTANCE BETWEEN PENDANTS When arranging pendant drops, plan the location of each pendant on the ceiling.


Recommended minimum distance between the centre of each ceiling rose (A) is **180mm (7in).** 

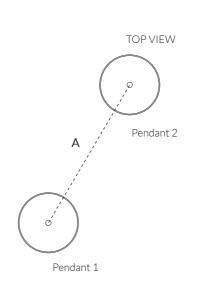



#### ADJUSTING THE CORD


To adjust the cord to your desired length, using a flat head screw driver, loosen the grub/set screw (1) and push the cable up into the ceiling plate.

Secure the cable in place by re-tightening the grub screw. Maintain all double insulation.

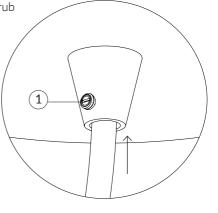

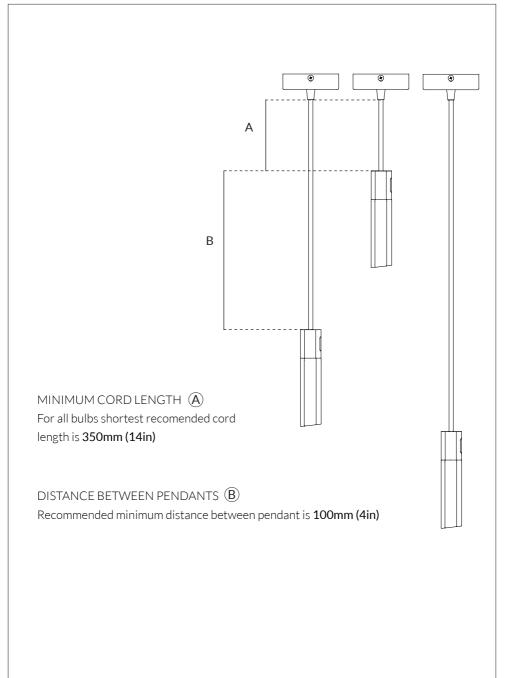

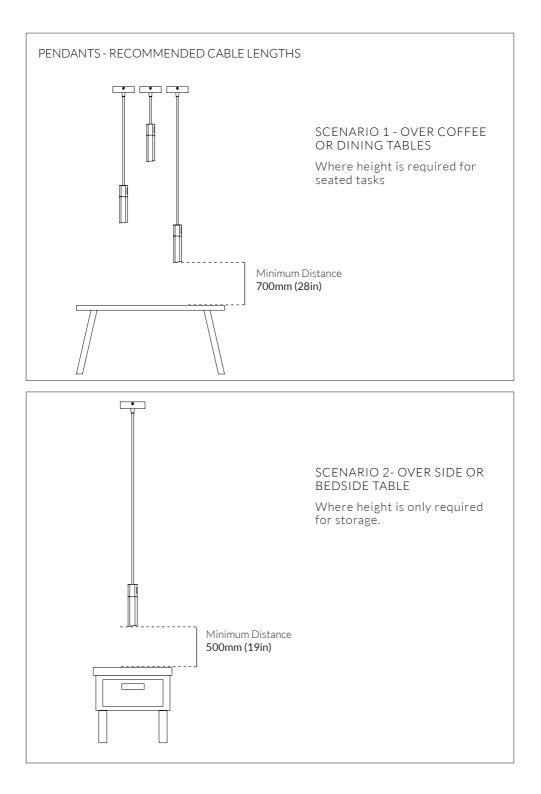

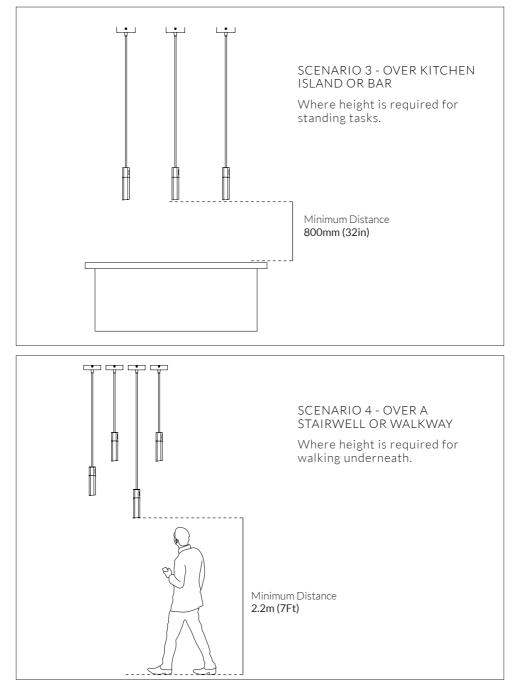

#### Join the Community

Instagram: @tala | Facebook: talaHQ | Pinterest: TalaLED | Tag: lighttoliveby Tala Studios, 25B Vyner Street, London E2 9DG | +44 20 3026 3246 | hello@tala.co.uk